



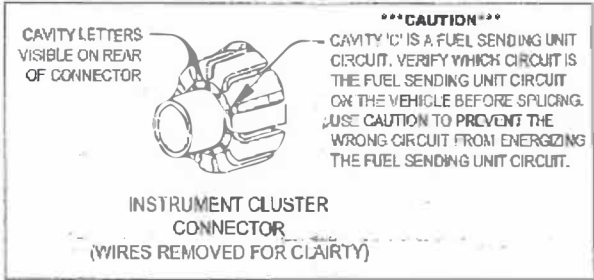

Questions?
 Call us Toll Free at:
1-888-648-4923

(Mon-Fri, 9AM-5PM, EST) or email Mike Meditz at: mike@kaiserwillys.com

*****ATTENTION*****
 BEFORE REPLACING THE INSTRUMENT CLUSTER PIGTAIL, CHECK EXISTING WIRE COLORS AND CIRCUIT FUNCTIONS TO VERIFY THAT THEY MATCH THE CAVITY FUNCTION CHART BELOW.

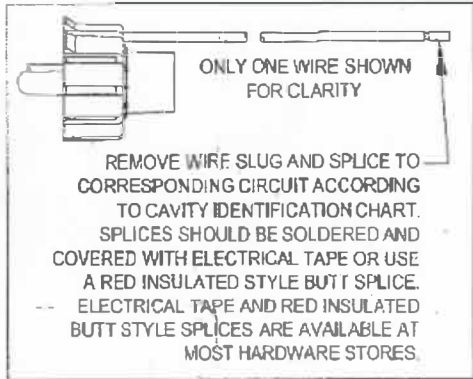

CAVITY CIRCUIT & FUNCTION IDENTIFICATION CHART

CAVITY	WIRE COLOR	DESCRIPTION
A	DARK BLUE/YELLOW	TO TEMPERATURE SENDING UNIT
B	RED/DARK BLUE	TO HEADLAMP SWITCH OR DIMMER RHEOSTAT
C	WHITE	TO FUEL GAUGE SENDING UNIT
D	BLACK/YELLOW	TO INSTRUMENT CLUSTER GROUND
E	YELLOW/BLACK	TO LEFT TURN INDICATOR LAMP
F	---	CAVITY EMPTY
G	PURPLE	TO OIL PRESSURE SENDING UNIT
H	GRAY	TO CHARGING INDICATOR LAMP (GEN)
J	BLACK/WHITE	TO RIGHT TURN INDICATOR LAMP
K	DARK GREEN/WHITE	TO SWITCHED IGNITION POWER (KEY IN RUN POSITION ONLY)
L	WHITE/RED	TO HI-BEAM INDICATOR LAMP