


DOOR

HOW TO INSTALL DOOR WEATHERSTRIP

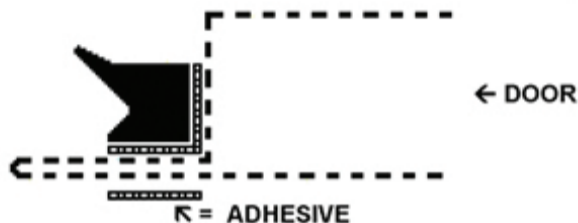

1. Use 3M Weatherstrip Adhesive # 051135-08008 BLACK
2. Take door off & turn upside down on 2 sawhorses
3. Apply adhesive to Weatherstrip & let dry
4. Apply adhesive to Door starting at the bottom of the door (double gluing creates a strong hold)
5. Install Weatherstrip - ending at the bottom of the door
6. If necessary, use wooden clothespins to hold Weatherstrip in place