


6 or 12 VOLT HORN Part No. B0634-R INSTALLATION

MOUNTING

- 1) If you are replacing an original style horn, find the vehicle's horn mounting bracket.
- 2) If you are making a new installation, locate an area in the engine compartment that is dry and safe from the engine's exhaust manifold heat. The horn's front grill should be mounted facing downward to help prevent water from entering the horn.

WIRING

This horn is a (2) terminal type. **WARNING:** Wire used must be 18 gauge or larger.

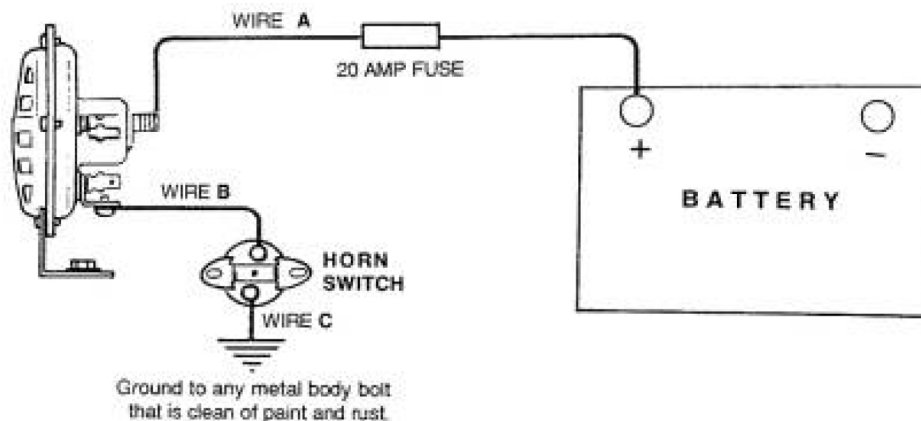

- 3) Connect wire A to one of the horn's terminals and to the positive post from the battery or from a hot lead in the vehicle. A 20 amp fuse must be used (not included in kit).
- 4) Connect wires B onto the back of the horn switch and to the remaining terminal on the horn.
- 5) Connect the horn switch wire C to the vehicle's body ground. Place ground wire under any clean body bolt that is free from paint and rust. If you are using the original Jeep* horn button at the top of the steering column, wire C is not actually a wire but the horn button ground.

WARNING: If horn your button sticks, disconnect power to the horn immediately. Do not blow the horn for long uninterrupted lengths of time.